



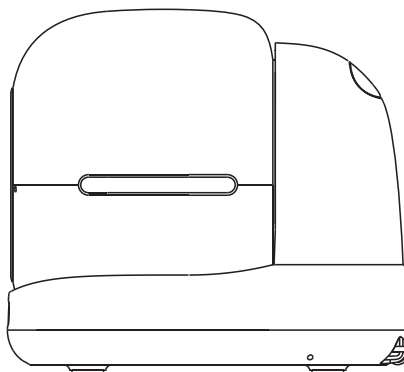

- | | |
|--------------------------------|----------------------------------|
| EN User manual | IT Manuale d'uso |
| NL Gebruikshandleiding | SV Bruksanvisning |
| FR Mode d'emploi | PL Instrukcja obsługi |
| DE Benutzerhandbuch | CS Uživatelská příručka |
| ES Manual del usuario | SK Používateľská príručka |
| PT Manual do utilizador | |

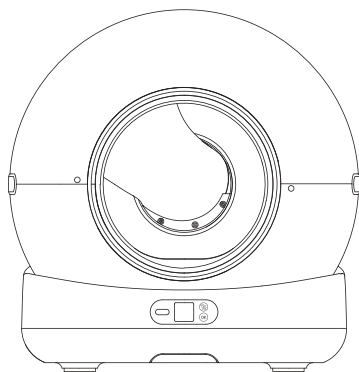


Automatic Cat Litter Box


01.630010.01.001

(EN) User manual	4	(IT) Manuale d'uso	64
(NL) Gebruikshandleiding	13	(SV) Bruksanvisning	74
(FR) Mode d'emploi	23	(PL) Instrukcja obsługi	83
(DE) Benutzerhandbuch	34	(CS) Uživatelská příručka	93
(ES) Manual del usuario	44	(SK) Používateľská príručka	102
(PT) Manual do utilizador	54		


A

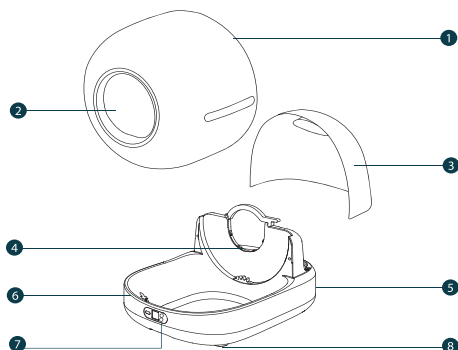


A

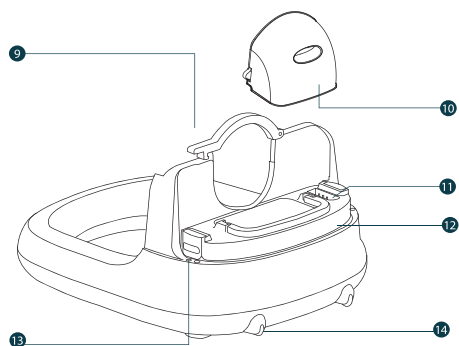


B

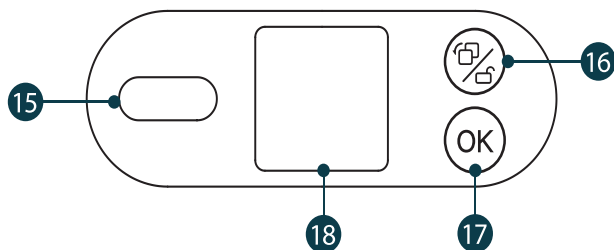


C

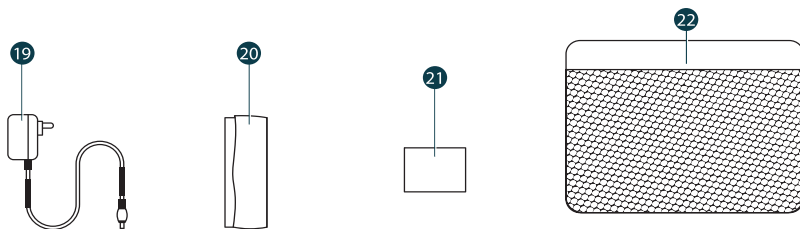


D

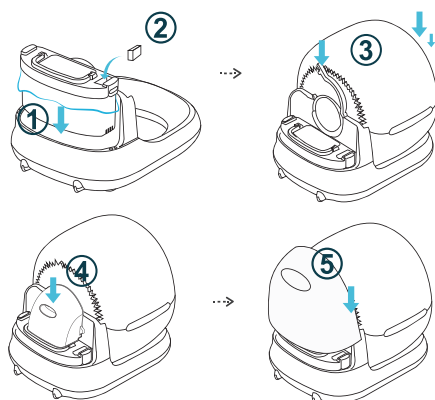

E

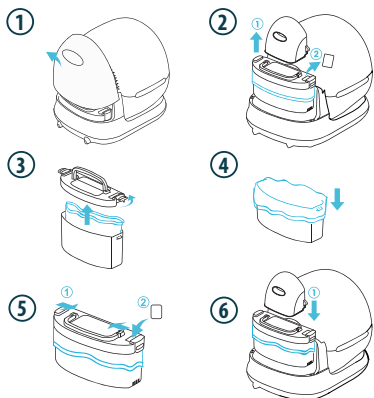

F

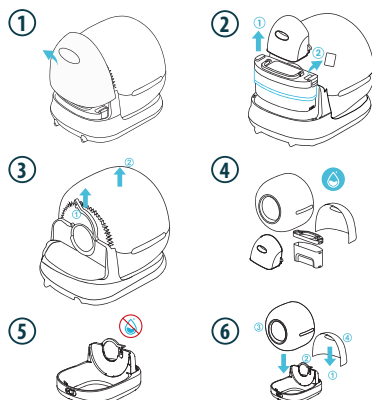

Automatic Cat Litter Box

Main parts (see image A)

- | | | |
|-------------------------|----------------------------|--------------------------------|
| 1 Ball bin | 6 Base unit | 11 Odor control pod |
| 2 Cat entry port | 7 Control interface | 12 Waste collector tray |
| 3 Rear protective cover | 8 Weight detection sensors | 13 Rear protective cover holes |
| 4 Globe mounting base | 9 Globe release handle | 14 Wheels |
| 5 Power socket | 10 Waste compartment lid | |

Control panel (see image B)

- | | |
|------------------------------|-------------------|
| 15 Infrared sensor | 17 Confirm button |
| 16 Mode switch / Lock button | 18 LCD screen |

Accessories (see image C)

- | | |
|------------------|---------------------|
| 19 Power adapter | 21 Deodorizer block |
| 20 Garbage bag | 22 Sand control mat |

SAFETY

Safety precautions

- By ignoring the safety instructions the manufacturer cannot be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- The appliance is **not recommended for pets younger than three months**.
- Kittens weighing less than 1kg and lactating cats should not use the auto cleaning mode of the device.
- Do not exceed recommended litter capacity.
- Keep children from climbing or sitting on the device.
- Supervise your pet during initial use.
- Keep packaging materials away from children and pets.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if

they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.

- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.

⚠ WARNING

Safety hazard due to unintended use:

- Only use the appliance as described in this user manual.
- Never use the appliance if there are visible signs of damage or defects. Always replace a damaged or defective appliance immediately.
- Never make any adjustments to the appliance. Adjustments may affect safety, warranty and proper operation.

Electric shock hazard due to short-circuiting:

- Never immerse the motor unit in water or any other liquid. Only clean the motor unit with a soft, damp cloth.
- Never open the appliance. The appliance may only be opened for maintenance by an authorised technician.
- Never lift the appliance by the power cable. Lifting the appliance by the power cable may damage the power cable. Only lift the appliance by holding the base.
- Always unplug the power cable when the appliance is not in use, and before cleaning.
- Always check if the voltage stated on the type plate of your appliance matches your mains voltage before use.

Safety hazard for children:

- Children of less than 3 years should be kept away unless continuously supervised.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use this appliance in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

Fire hazard due to short-circuiting:

- Never use the appliance in the immediate surroundings of a bath, a shower or a swimming pool.
- Never drop the appliance and avoid bumping. Excessive vibrations can lead to loosened connections and can influence proper functioning of the appliance. Stop using the appliance if the appliance has been dropped.
- Never use the appliance with a programmer, timer, separate remote-control system or any other device that switches the appliance on automatically, since a fire risk exists if the appliance is covered or positioned incorrectly.
- Please do not install the appliance close to curtains and other combustible materials. This could cause a fire.

Snagging hazard due to moving parts:

- Always keep your hair and clothing away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.

NOTICE

Risk of damaging the appliance:

- Never use aggressive chemical cleaning agents that can damage the appliance when cleaning the appliance.
- Never place the appliance near a heat source.

FOREWORD

About this document

This user manual contains all the information for correct, safe, and efficient use of the appliance.

Ensure you have fully read and understood the instructions in this user manual before you use the appliance.

Always store this user manual in a safe place near the appliance for future reference.

Original instructions

This manual is originally written in English. All other languages are translated documents.

General symbols

Symbol	Description
	This product complies with conformity requirements of the applicable European regulations or directives.

	The Green Dot is the registered trademark of Der Grüne Punkt – Duales System Deutschland GmbH and is protected as a trademark worldwide. The logo may only be used by customers of DSD GmbH holding a valid trademark usage contract or by engaged waste management companies within the Federal Republic of Germany. This also applies to reproduction of the logo by third parties in a dictionary, an encyclopaedia or an electronic database containing a reference manual.
	Separate collection / Check your local municipal guidelines.
	The product and packaging materials are recyclable, subject to extended manufacturer responsibility. Dispose it separately, following the illustrated packaging symbols, for better waste treatment. The Triman logo is valid in France only.
	The universal recycling symbol, logo, or icon is an internationally recognized symbol used to designate recyclable materials. The recycling symbol is in the public domain and is not a trademark.

APPLIANCE DESCRIPTION

The Princess 01.630010.01.001 is an automated, app-connected litter system designed for cats, featuring smart sensing, automatic cleaning, weight detection, and multiple safety protections. It supports functions such as manual clean, automatic clean, smooth sand, and sand-pouring, and includes a deodorizer, waste bin, ball bin, and infrared sensors for safe operation.

Intended use

This appliance is intended for indoor use only.

This appliance is intended exclusively for domestic, non-commercial use.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels, and other residential type environments;
- bed and breakfast type environments.

Any use of the appliance other than described in this user manual is regarded as misuse and may cause injury or damage to the appliance and void the warranty.

Technical specifications

Appliance name	Automatic Cat Litter Box
Article number	01.630010.01.001
Power input	18 W
Power output	12V~ 50-60Hz
Power consumption in off-mode (W)	N/A
Power consumption in standby mode (W)	N/A
Time needed for the equipment to reach the applicable low power mode (min)	N/A

BEFORE FIRST USE

1. Take the appliance and accessories out of the box. Remove all packaging materials, stickers, protective foil and plastic from the device.
2. Place the cat litter box on a firm and flat ground. Ensure that the ball bin **A①** and waste bin **A②** (including the garbage bag) properly installed, place the rear protective cover **A③** correctly on the top.

Installation steps guide (see image E)

1. Fit the trash bag into the waste collector tray **A12** and assemble it properly before placing it on the base unit **A6**.
2. Insert the deodorizer block **C21**.
3. Place the ball bin **A1** in its designated position and lower the locking handle **A9**.
4. Place the waste compartment lid **A10** onto the waste collector tray **A12**.
5. Install the rear protective cover **A13**.

USE

- Turn on the device. The device will take a moment to complete its self-check process. When powered on, the barrel compartment will rotate to perform the check and then return to its default position. **Note:** If the self-check is completed successfully, no indicators will remain on.
- After the self-check is complete, the device will automatically switch to smart-sensing mode, and no further adjustments are required.

Note: Do not pick up or drag the product after powering it on (this may interfere with weight calibration during the reset program).

Filling the Litter Compartment

- Fill the litter without exceeding the "Max Line". Use the mode switch button **B16** to select the calibration icon then press the confirm button **B17** to calibrate the weight.

Control panel

- **Control panel functions:**
 - **Mode switch button:** Short press to switch modes.
 - **Lock:** Press and hold for 5 seconds to lock.
 - **Unlock:** While locked, press and hold for 5 seconds to unlock.
 - **Confirm key:** Confirm in the selected mode.
- **LCD Screen:**
 - When the function button is active, a warning icon appears if something is detected nearby.
 - Icons stay solid when chosen and blink while carrying out a task.

Screen Icon Description (LCD Screen)

	Name	Icon	Status	Description
Function	WiFi		Flashing Steady	If WiFi is not connected, select the WiFi icon. Press and hold the confirm button B17 for 5 seconds to connect. WiFi connection is successful.
	Smooth Sand		Flashing	Use the mode switch button B16 to select the Smooth Sand icon, then briefly press the confirm button B17 to perform.
	Manual Clean		Flashing	Use the mode switch button B16 to select the Manual Clean icon. Briefly press the confirm button B17 to start cleaning.
	Pour Sand		Flashing	Use the mode switch button B16 to select the Pour Sand icon, press and hold the confirm button B17 for 5 seconds to empty the litter.
	Weight Calibration		Flashing	Use the mode switch button B16 to select the Weight Calibration icon, then press the confirm button B17 briefly to perform weight calibration (recommended after adding or replacing cat litter).
Warning	Pet Entered		Steady	Icon reminder after the pet enters or when cat litter is added.
	Object Nearby		Steady	Alerts you when something is detected near the device.
	Waste Bin Full		Steady	Reminds you to replace the trash bag when the waste bin is full.
	Rear Protective		Steady	Alerts you if the rear cover is not properly secured.
	Do not Disturb		Steady	Indicates the device is in Do Not Disturb mode.

APP CONNECTIONS

1. You can download Princess Home in App Store and Google Play. Or you can scan the below 2 QR codes:



iOS™



Android™

2. Make sure your phone is connected to 2.4GHz WiFi network, then turn on Bluetooth and Location services.
3. Press the "Mode Switch" button **B16** to select the WiFi icon, then press and hold the confirm button **B17** for 5 seconds to connect to WiFi (this is also the same process for resetting WiFi).
4. Open your phone app to add the device by Bluetooth or WiFi.

Notice:

If the network configuration fails or a timeout message appears, please check the following. Make sure WiFi, Bluetooth, and Location devices are enabled at the same time.

- Ensure the WiFi network the 2.4G Hz band and that your phone is connected to a 2.4G Hz WiFi network.
- Note: The product cannot recognize the 5G Hz network.
- Check whether the WiFi indicator on the panel is flashing during network configuration process.
- Make sure the Wi-Fi signal is strong enough. If the signal is weak, move the device closer to the router and reconnect. **Note:** the router may be connected to too many wireless devices, which can cause IP address conflicts.

OPERATION INSTRUCTIONS

Function	Description	Notice
Clean	Tap the "Manual Clean" option in the app or select the cleaning icon on the cat litter box to start cleaning.	During cleaning, you can stop the process by tapping the "Manual Clean" button in the app. If the cleaning icon on the cat litter box is flashing, you can also press the confirm button B17 briefly to cancel the cleaning.
Replace litter	Replace the waste bag with an empty one (to prevent overflow if the current bag is already full). Make sure most of the remaining litter has been used up (to avoid spilling when the litter is emptied). Press the "Sand Pour" button and wait for the cat litter box to discharge the remaining litter. Once the litter is cleared, replace the waste bag with a new empty one again.	In "Pour sand" mode, if you made a mistake or forgot to replace the waste bag, you can tap "Pour sand" again immediately to clean and replace the filter. When the waste bin is full, the LCD screen will show a "Waste Bin Full" warning icon, and the app will send you a notification.

Add cat litter	After adding cat litter, use the "Mode Switch" button to select "Weight Calibration", then briefly press the confirm button B17 to recalibrate the weight.	The device has a built-in safety feature. It will automatically stop if a cat gets close to the entrance or if it detects weight during operation or cleaning. Do not add too much litter. Make sure the amount of litter stays below the MAX line to avoid spilling when the machine rotates.
Healthy sterilization	One-touch sterilization runs for 30 minutes and then stops automatically. You can set the start time and how long the sterilization should run.	When you turn on the UV sterilization function, it will run for about 30 minutes and then shut off automatically. Note: The sterilization will pause automatically if the cat enters the litter box, and it will continue once the cat leaves.
Automatic Clean	Tap "Automatic Clean" on the device panel or in the app. The device will automatically detect when your cat enters and leaves the litter box (It will begin working automatically after the device is powered on and completes its self-check).	If your kitten weighs less than 1 kg or is pregnant, turn off auto-cleaning in the app. Use Manual Clean instead, depending on the situation. If you use fast-clumping litter, you can adjust the "Shovel Poop Delay Time" in Automatic Clean. The device will wait (for example, 1 minute) after the cat uses the litter box before cleaning, helping reduce odor and clean more effectively. If the cat stays in the litter box for more than 10 seconds, the device assumes the cat is using the toilet. Note: If the app buttons are not responding or syncing with the device, check your network connection, reconnect the device, or tap the buttons in the app once or twice again.
Schedule a clean up	Set up a cleaning schedule based on your needs. The device will perform routine daily cleaning at the times you choose.	If a scheduled cleaning overlaps with Do Not Disturb Mode, the device will still perform a regular cleaning (but not sterilization), and then it will return to Do Not Disturb Mode afterward.
Deodorizer replacement	Check how long the deodorizer has been used and how much valid time it has left.	After placing the deodorizer in the little box, go to "Deodorizer Replace" tab in the app and tap "Confirm" to start the replacement countdown.
Sleep mode	If the cat litter box is placed in your bedroom, you can turn on "Do Not Disturb" mode in the app. This prevents the cat litter box from operating at night, ensuring it does not disturb your sleep.	

Ball bin light and child lock	Child Lock: You can turn the Child Lock on or off in the app. You can also unlock it by pressing and holding the "Sand Pouring" button on the device for 5 seconds. Ball Bin Light: Turn on the light to check inside the ball bin at night or in low-light conditions.	Child Lock only affects the physical buttons on the front panel of the device.
Toilet statistics	You can view your cat's toilet data in different time ranges: Day: Shows toilet statistics for each hour of the day. Week: Shows toilet statistics for the entire week. Month: Shows daily toilet statistics for the whole month. Year: Shows toilet statistics for each month of the year.	

CLEANING AND MAINTENANCE

Replace Garbage Bag (see image F)

- When the LCD screen **B13** shows the waste bin full icon, or the app sends a message saying "The waste bin is full," it's time to replace the garbage bag.
- Open the rear protective cover **A3**.
 - Pull out the waste collector tray **A12** and remove the deodorizer.
 - Open the two side locks and lift out the old garbage bag.
 - Insert a new garbage bag into the waste collector tray **A12**.
 - Close and fasten the top cover of the waste collector tray **A12**.
 - Place the assembled waste collector tray **A12** back into the unit. Make sure the opening of the garbage bag is facing downward.

Note: During the cleaning cycle, all buttons are temporarily disabled. If you need to use other functions, please wait until the cleaning process has fully finished.

Wash bin (see image G)

- Open the rear protective cover **A3**.
- Remove the waste collector tray **A12** and take out the garbage bag and deodorizer.
- Lift the ball bin **A1** to separate it from the base.
- Wash the waste collector tray **A12** and ball bin **A** with water (these parts are water-safe).
- Do NOT wash the base unit with water. Clean it only with a soft cloth.
- Reassemble all parts in the correct order after cleaning.

Note: The ball bin, waste collector tray, and rear protective cover can all be washed with water. The base unit cannot be rinsed, clean it only by wiping with a cloth.

Note: The deodorizer lasts for 14 days. The remaining usable days can be checked in the app.

Troubleshooting

Icon	Reason	Solution
	WiFi not connected	Press the Mode Switch button to select the WiFi icon. Press and hold confirm button B17 for 5 seconds. The WiFi icon will flash, and you can begin the app connection.
	A pet enters during the process of adding & emptying the litter	After adding or emptying litter, follow the "Weight Calibration" instructions for recalibrate, or wait 5 minutes for automatic calibration.
	Object blocking sensor	Check whether the infrared sensor is blocked by a pet or an object. Remove the obstruction.
	Waste bin full	Replace the garbage bin with a new one.
	Rear protective cover is not properly secured	The rear cover protective is correctly aligned with the grooves on both sides.

DISPOSAL



This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

Support

You can find all available information and spare parts at www.princesshome.eu!



IN NEED OF ACCESSORIES? VISIT WWW.PRINCESSHOME.EU/NL-NL/CUSTOMERSERVICE/ACCESSORIES-SPAREPARTS
FOR ACCESSORIES AND SPARE PARTS TO EXTEND YOUR ITEM!

© Princess | Swaardvenstraat 65 | 5048 AV Tilburg | The Netherlands | www.princesshome.eu