NAIPO
FIND WELL-BEING

User Manual

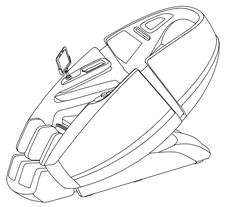

Massage Chair

Mode: MGC-8900

Company Name: Mustbuy GmbH
Company Address: Frankenstraße 29 20097 Hamburg
Customer Service Email: info@mustbuy.eu
Website: https://naipo.de

Made in China

Contents

English ..... 01~17
Deutsch ..... 18~35

材质：105g铜版纸
尺寸：105 x 148.5mm
印刷：单黑双面印刷
装订方式：骑马钉装订
（封面内页留白）

Thank you for purchasing the NAIPO MGC-8900 Massage Chair. Please read this use and care manual thoroughly and keep it in a safe place for future reference. If you need any assistance, please contact our customer support team.

MPORTANT SAFETY INSTRUCTIONS:

DANGER - To reduce the risk of electric shock:
Always unplug this massage chair from the electrical outlet immediately after use and before cleaning.

WARNING - To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- Unplug from outlet during thunder or lightening storms, and before putting on or taking off parts.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
- Check that the power voltage stated on the rating label corresponds to your local electricity supply.
- Do not use a damp hand to unplug the cord to avoid electric shock.
- Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- Do not drag the cord, or reach to the front plastic end to unplug it.
- Do not squeeze,over bend , pull hard, twist the cord and please keep the cord away from heated surfaces.
- Do not carry this appliance by supply cord or use cord as a handle.
- To disconnect, turn all controls to the OFF position, then remove plug from outlet.
- The appliance is only to be used with the power supply unit provided with the appliance.

- The appliance must only be supplied at safety voltage corresponding to the marking on the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not use the appliance if abnormal sound is heard.
- Do not massage areas that are swollen, inflamed or covered with skin eruptions.
- Connect the massage chair to a properly grounded outlet.

SAFETY PRECAUTIONS

- This product is designed for personal in-home use. Commercial use will void warranty.
- Maximum user's weight is 120kg.
- Do not use the appliance when the upholstery or seat is removed, or when the appliance is not properly installed. This may cause injury or malfunction.
- Do not massage the same area for more than 5 minutes at a time as it may result in excessive stimulation and adverse effects.
- Do not use the appliance in an hour after meal.
- Do not allow children or pets to play around the device, behind the backrest or under the seat to avoid accidental injuries.
- Do not use the device when your body is wet, and please do not operate with wet hands.
- Stop using immediately if you experience any discomfort.
- The appliance is not intended for self diagnosis or self-treatment of conditions that should be managed by a qualified health care provider.
- Please consult your doctor before use if you are pregnant or menstruating.
- The suggested usage duration is 20 minutes.

NAMES AND FUNCTIONS OF PARTS:

External Structure

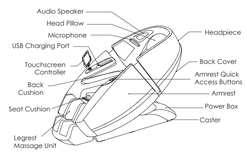

Internal Structure

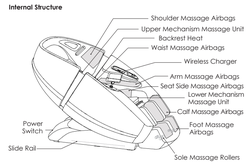

Quick Control Buttons

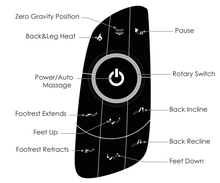

Instructions of Quick Control Buttons

Power/Auto Massage
Quick press rotary switch to toggle auto massage programs.

Rotary Switch
Rotate clockwise/counterclockwise to increase/decrease 3D massage intensity;

Zero Gravity Position
Press to position the chair in Zero Gravity Position, press again to restore to default position.

Footrest Extends
Press and hold to extend the footrest; release the button to stop. (Make sure there is no obstruction in advance)

Footrest Retracts
Press and hold to retract the footrest; release the button to stop.

Pause
Press to pause massage chair function, press this button again to continue.

Feet Up
Press and hold to raise the footrest; release the button to stop.

Feet Down
Press and hold to lower the footrest, release the button to stop.

Back&Leg Heat
Press to turn on Back&Leg Heat, press again to turn off Back&Leg Heat.

Back Incline
Incline: Press and hold to incline the backrest to upright position; Release the button to stop.

Back Recline
Recline: Press and hold to recline the backrest; Release the button to stop. When the backrest reclines to its third quarter position,it will stop and wait for the lower mechanism to reach a safe clearance before it continues to recline.

FEATURES AND PRODUCT HIGHLIGHTS:

1. One Press Control Sliding Forward
It will slide forward by 28cm and recline afterwards.
Glider recliner linkage mechanism to save space and provide utmost relaxing position.



2. Zero Gravity Position
At such a weightless position that the height of the legs slightly higher than the upper body,the weight of body can evenly distributed throughout, reducing the pressure of the spine and joints both physically and mentally.

3. Auto/Manual Footrest Extension
The upper footrest can extend by 7cm and lower footrest can extend by 15cm automatically for various users with different stature.

4. Whole Body Air Pressure Massage
Whole Body Air Pressure Massage for shoulders, arms, back, waist, hips, legs and feet.

5. Roller Massage
3 underfoot rollers provide all-direction pressure massage for the reflex zone.

6. Versatile Massage Techniques
Mimic human hand kneading, knocking,sync.tapping,shiatsu massage techniques with extra calf rubbing massage for custom-tailored relaxation.

Leg Extends/Retracts

►Press and hold " " or " " button to extend or retract the footrest to the length you desire for better massage experience, release the button to fix the position.



►A footrest sensor is set at the bottom of footrest,the footrest will adjust the length automatically once the chair started.

WARNING
►Do not play on the massage chair or operate it improperly.
►Ensure there is no obstruction when raising or reclining the backrest and footrest.
►Do not place foot,fingers or any other objects in the space between the seat and the backrest/footrest when it is in the reclining or raising motion.
►Ensure massage chair is restored back to its original position before getting off the massage chair.

After Use

- Always unplug the massage chair from the electrical outlet immediately after use.
- Secure the center console onto the holder.
- Turn off the power switch and unplug the massage chair from the electrical outlet while not in use to avoid children power on the massage chair accidentally.
- When not in use for a long period of time,we recommend that the chair be covered, the power cord be coiled and that the unit be placed in an environment free of dust and moisture.

PREPARATION BEFORE USE:

Installation Methods

Step 1: Take all massage chair units out of the cartons
►Unpack the cartons;take out all upholstery unit,accessories out of the cartons.
►Before beginning installation,please verify that all components are included (check with the packing list carefully).

Step 2: Install Armrest Unit

- Connect the numbered air hose to the matching numbered nozzle on the armrest and plug in the air valve connector.
  (There are 2 air valve plugs at the other side armrest)



- Hold the armrest unit up and hook the hanger 2 onto the carrier groove, slowly push the armrest unit back into the chair linkage until hanger 2 aligns completely with hanger 4,insert hanger 1 into hanger 3,use a screw to secure the armrest into place.(Same installation method with the other side)

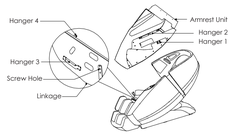

Step 3: Install Touchscreen Controller Holder
►Insert the lower end of Touchscreen Controller holder into the socket, turn the nut clockwise to secure the holder into place.

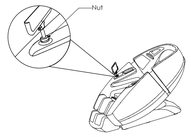

Step 4: Install the Footrest Unit
►Raise the Leg rest unit,thread the Air Hose into the air nozzle,and fit the Air Valve Plug into the Air Valve Port which located at the face side of seat base, make sure they are well secured.



Placing the Unit
Clearance space for the massage chair:
►Ensure there is an adequate clearance for the installation: It need 10cm clearance for the recline of the backrest; It need 60cm clearance space for the extension of footrest and sliding forward of the chair.
►Keep it 1 meter away from the TV, radio or other audio&video appliance to avoid signal interference.

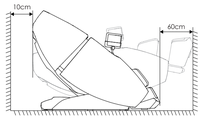

Floor Protection
We recommend to place a piece of carpet or soft mat underneath it to avoid damaging the floor.

►Put the Leg rest Hanger Sleeve into the Leg rest Hanger, attach the Leg rest Hanger onto the Leg rest Rotation Shaft ,then attach a DK Cir clip to the end of the Leg rest Rotation Shaft to hold the leg rest in place,then zip the footrest and main chair together.

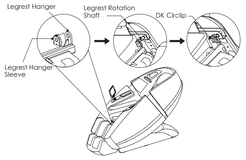

Step 5: Other Accessories
►Connect the power cable to the product power socket located at the power box of the product.
►Switch ON the power located at the back of power box, raise the backrest of the product to fully upright position.

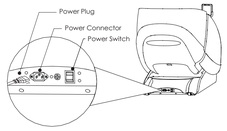

WARNING
Do not use the massage chair in high moisture environment such as near swimming pool or bathroom to prevent electric shock accident.
Please keep the massage chair away from heated surfaces to prevent fire hazard or damage to the product.

DANGER
This product must be grounded, the plug must be plugged into an appropriate 3-wire grounded outlet that is properly installed and grounded in accordance with all local codes and ordinances to reduce risk of electrical shock

Moving Methods
►Roll the chair on its casters to the desired location.
►Incline the backrest to upright position.
►Turn off the power switch and unplug the appliance from the electrical outlet.
►Using two people,push down on the backrest and lift up on the front side by grabbing the moving Holder located to the front bottom of the armrest). roll the chair on its casters to the desired location(check the sketch for reference).

CAUTION
►Do not move the chair when there is user inside.
►To carry this product, do not lift by the footrest or armrest,hold the chassis and steady the backrest(have 4 or more people to carry the product).

Connect to Power
►Connect this appliance to a 3-wire properly grounded outlet.
►Turn on the main power switch by the right hand side of the massage chair.

CAUTION
►Please verify that there is no damage to the supply cord before switching on the massage chair.
►Please verify that the main power switch is turned off before connecting to power.

Commissioning

►Use the quick access button to recline the backrest to its lowest position, raise and extend the footrest to its top position, make sure there is enough clearance before commissioning.
►Return the backrest and footrest back to its default position after commissioning and turn off the power switch. (To choose the massage program , please check the Instructions of Quick Access Buttons and Instructions of Center Console for reference.)



Inspections Before Sitting
►Ensure the footrest is well assembled before sitting on the massage chair.
►Ensure the massage chair is returned to its original position before sitting on it. If there is any part not in default position, please turn off the massage chair to allow it to restore.

CAUTION
►Do not take seat while the footrest is lifted.
►Do not put excessive load on the footrest to avoid damage.

STORAGE AND MAINTENANCFE:

Care and Maintenance Instructions
►To treat stains on back panel, armrest, footrest, plastic parts or air hose, spot clean with mild detergent foam ,then wipe it with a dry cleaning cloth.
►To treat stains on controller, power box, spot clean with a dry cleaning cloth.
►To treat stains on back cushion or pillows, use a water-based upholstery cleaner only, wipe it with moist cloth, then air dry.
►To clean the foot/calf unit covers, remove it from the chair, hand wash with a mild detergent, then line dry.

Note:
►Pull out the power cord from the power strips before care and maintenance.To avoid electrical shock or injury,do not touch the power cord with wet hands.Make sure no detergent enter into the power box while cleaning.
►Do not use benzene,thinner or other solvents on your product,it may cause fading or damage to the product.
►Do not iron the upholstery

Storage Methods
►Keep the product free from dust.Cover the product with a dust-free cloth to prevent collection of dust if not in use of a long period of time.

Note:
►Do not leave this product exposed to direct sunlight for long periods of time. This may cause fading or damage.

Warm Tips

During daily use, please check for the following symptoms:
►Burnt smell.
►The product experiences unusual power ON/OFF when touching the power cord. Hot power cord.
►Other abnormal symptoms.

Note:
►Please stop using the product to avoid breakdowns or accidents if any above symptom spotted.
►Switch off the power button and disconnect the plug, contact the local distributors or supplier for repair.
►All other servicing except above care and maintenance should be serviced by an authorized dealer or service center.

WARNING
Pull out the power cord from the power strips before care and maintenance. To avoid electrical shock or injury, do not handle the tpower cord with wet hands. Do not try to dismantle or repair the product yourself, please send your massage chair to the authorized service center.

TROUBLESHOOTING:

Problems	Possible causes	Actions
Noise is heard while in use	These noises are normal and arise from friction between the massage rollers and the leather cover.	No need to take any measures

Massage Chair does not start	The power cord is not secured into the socket	Insert the power plug properly into the power socket
	Power switch is off	Turn on the switch
	The fuse is blown	Replace only with a fuse of same type and rating
No music comes from the speaker	The volume is turned to the lowest	Adjust the speaker volume from the mobile devices
Backrest or footrest can not raise or recline	Excessive load has been pressed on the backrest or leg rest	Reduce the load and try again
Airbag malfunction	The air hose is blocked	Straight the air hose and clear out the blockage

If you still have problem with the machine, please contact our customer support team.

SPECIFICATIONS:

Model Number: MGC-8900
Product Name: NAIPO MGC-8900 Massage Chair
Rated Frequency: 50-60Hz
Power Consumption:180W
Rated Voltage: 220-240V
Rating Time: 20 Minutes
Chair Dimension: 170*85*125cm
Gross/Net Weight: 204/169kg
Safety Design: Class I

WARRANTY AND CUSTOMER SERVICE:

For questions, assistance, support, or warranty claims, please contact us at the address below that corresponds with your region. Please include your order number and product model number when contacting us.

Vielen Dank für den Kauf des Naipo Nacken & Rücken Massagegerätes. Bitte lesen Sie diese Bedienungsanleitung sorgfältig durch und bewahren Sie sie an einem sicheren Ort auf. Wenn Sie Hilfe benötigen, wenden Sie sich bitte mit Ihrer Produkt-Modellnummer und der Amazon-Bestellnummer an unser Support-Team.

WICHTIGE SICHERHEITSHINWEISE:

GEFAHR - Zur Risikominderung eines Stromschlages: Trennen Sie den Massagesessel von der Netzsteckdose unmittelbar nach dem Gebrauch und vor dem Reinigen.

WARNUNG - To reduce the risk of burns, fire, electric shock or injury to persons:

- Lassen Sie das Gerät niemals unbeaufsichtigt, wenn es mit einer Stromquelle verbunden ist. Trennen Sie das Gerät von der Stromquelle, wenn es nicht in Gebrauch ist und bevor Sie Zubehör aufsetzen bzw. abnehmen.
- Trennen Sie das Gerät von der Stromquelle bei stürmischen Wetterbedingungen wie Donner und Blitz und bevor Sie Zubehör aufsetzen bzw. abnehmen.
- Benutzen Sie niemals das Gerät, wenn das Netzkabel oder -stecker beschädigt, nicht ordnungsgemäß funktioniert, heruntergefallen oder beschädigt, oder in Wasser gefallen ist. Bringen Sie das Gerät bitte zu einem Kundencenter zur Untersuchung und Reparatur.
- Vergleichen Sie bitte die geeignete Betriebsnennspannung auf dem Typenschild mit der örtlichen Stromzufuhr.
- Entfernen Sie das Netzkabel nicht mit feuchten Händen, um einen Stromschlag zu vermeiden.
- Gebrauchen Sie das Gerät nicht unter einer Decke oder Kissen. Dies kann zu einer Überhitzung führen und Feuer, Stromschlag oder Personenschäden verursachen.
- Ziehen Sie nicht an dem Netzkabel oder greifen das vordere Kunststoffende, um den Netzstecker von der Stromquelle zu entfernen.

- Drücken Sie das Netzkabel nicht zusammen nach biegen es, ziehen nicht mit hoher Kraft daran, und halten es bitte von heißen Oberflächen fern.
- Tragen Sie das Gerät nicht indem Sie das Netzkabel als Haltegriff verwenden.
- Zum Ausschalten des Geräts drehen Sie alle Schalter in die Aus-Position und entfernen dann den Netzstecker von der Netzsteckdose.
- Verwenden Sie das Gerät nur mit einer geeigneten Stromzufuhr.
- Betreiben Sie das Gerät nur mit einer sicheren Nennspannung wie auf dem Typenschild angegeben.
- Falls das Netzkabel beschädigt ist, muss es von dem Hersteller oder Kundenservicemitarbeiter oder ähnlich qualifizierten Person ersetzt werden, um eine Gefährdung zu vermeiden.
- Verwenden Sie das Gerät nicht, wenn es anormale Geräusche abgibt.
- Massieren Sie nicht mit dem Gerät Stellen, die geschwollen, entzündet oder von Hautausschlägen gezeichnet sind.
- Verbinden Sie den Massagesessel mit einer angemessenen geerdeten Steckdose.

SICHERHEITSVORSCHRIFTEN:

- Dieses Gerät ist nur für den Privatgebrauch entworfen. Ein gewerblicher Gebrauch wird sämtliche Garantieleistungen nichtig machen.
- Die maximale Gewichtsbelastung beträgt 120 kg.
- Verwenden Sie das Gerät nicht, wenn die Polsterung oder Sitz entfernt ist oder, wenn das Gerät nicht ordnungsgemäß montiert ist, da dies zu Verletzungen oder Fehlfunktionen führen kann.
- Massieren Sie nicht dieselbe Stelle für mehr als 5 Minuten, da dies zu einer übermäßigen Stimulation und negativen Auswirkungen führen kann.
- Verwenden Sie nicht das Gerät innerhalb 1 Stunde nach einer Mahlzeit.
- Erlauben Sie nicht Kindern oder Haustieren neben dem Gerät, hinter der Rückenlehne oder unter dem Sitz zu spielen, um unbeabsichtigte Verletzungen zu verhindern.

- Verwenden Sie das Gerät nicht, wenn Ihr Körper nass ist und bedienen Sie das Gerät nicht mit nassen Händen.
- Stellen Sie den Gebrauch sofort ein, wenn Sie Unbehagen verspüren.
- Das Gerät dient nicht der Eigendiagnose oder Eigenbehandlung von Erkrankungen, die von qualifiziertem Gesundheitspersonal behandelt werden sollen.
- Bitte konsultieren Sie Ihren Hausarzt, falls Sie schwanger sind oder menstrieren.
- Die empfohlene Gebrauchsdauer beträgt 20 Minuten.

BEZEICHNUNGEN UND FUNKTIONEN DER KOMPONENTEN:

Externer Aufbau

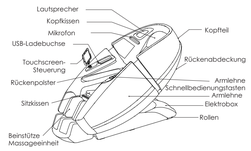

Interner Aufbau

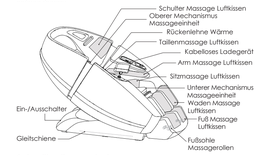

Schnellbedienungstasten

Anleitung zu Schnellbedienungstasten

Ein-/Ausschalter/Auto-Massage
Drücken Sie die Taste, um zwischen den Auto-Massageprogrammen zu wechseln.

Drehschalter
Drehen Sie im Uhrzeigersinn/gegen den Uhrzeigersinn, um die Intensität der 3D-Massage zu erhöhen/senken.

Null-Gravitation Position
Drücken Sie die Taste, um den Sessel in die Null-Gravitation Position zu bringen, Drücken Sie die Taste erneut und der Sessel kehrt in die Ausgangsposition zurück.

Fußstütze ausfahren
Drücken und halten Sie die Taste gedrückt, um die Fußstütze auszufahren; auf Loslassen der Taste hält die Fußstütze an (achten Sie darauf, dass sich keine Hindernisse in dem Bewegungsradius befinden).

Fußstütze einfahren
Drücken und halten Sie die Taste gedrückt, um die Fußstütze einzufahren; auf Loslassen der Taste hält die Fußstütze an.

Pause
Drücken Sie die Taste, um die Massagefunktion zu unterbrechen, Drücken Sie die Taste erneut, wird das Programm fortgesetzt.

Füße hoch
Drücken und halten Sie die Taste, um die Fußstütze zu erhöhen. Auf Loslassen der Taste hält die Fußstütze an.

Füße runter
Drücken und halten Sie die Taste, um die Fußstütze zu senken. Auf Loslassen der Taste hält die Fußstütze an.

Rücken & Bein Wärme
Drücken Sie die Taste, um die Wärme an Rücken und Bein einzuschalten. Ein erneutes Drücken der Taste schaltet die Wärme an Rücken und Bein aus.

Rücken hochstellen:
Drücken und halten Sie die Taste, um die Rückenlehne in eine aufrechte Position zu stellen. Auf Loslassen der Taste hält die Rückenlehne an, Back Recline.

Rücken runterstellen:
Drücken und halten Sie die Taste, um die Rückenlehne runterzustellen. Auf Loslassen der Taste hält die Rückenlehne an. Wenn die Rückenlehne zu dreiviertel heruntergefahren ist, wird sie stoppen und warten bis der untere Mechanismus ausreichend Freiraum festgestellt und danach weiter herunterfahren.

EIGENSCHAFTEN UND ARTIKELBESONDERHEITEN:

1. Drücken Sie die Fernbedienung, um das Modell vorzuschieben
Das Modell wird sich um 28 cm nach vorne schieben und danach absenken. Der Mechanismus zum Vorwärtsbewegen und Absenken spart Platz und bietet eine höchst entspannende Massageposition.

2.Null-Gravitation Position
In einer schwerelosen Position liegen die Beine etwas höher als der Oberkörper und das Körpergewicht wird gleichmäßig verteilt. Dabei wird der Druck auf die Wirbelsäule und Gelenke physisch und mental gelöst.

3.Auto/Manuelle Fußstütze ausfahren
Die obere Fußstütze kann um 7 cm ausgefahren werden, während die untere Fußstütze um 15 cm ausgestellt werden kann. Damit können Nutzer verschiedener Staturen den Sessel gebrauchen.

4.Ganzkörper Luftdruck Massage
Die Ganzkörper Luftdruck Massage bedeht sich auf Schultern, Arme, Rücken, Taille, Hüfte, Beine und Füße.

5.Roller Massage
Drei Rollen an den Fußsohlen bieten eine Druckmassage in allen Richtungen der Reflexzonen.

6. Zahlreiche Massagetechniken
Die Massagen mißesen ein menschliches Kneten, Klopfen, Schlagen, Shiatsu-Massagetechniken mit zusätzlichen Wadenreiben für eine maßgeschneiderte Entspannung.

Beinstütze fährt aus/ein

►Drücken und halten Sie die Taste , um die Fußstütze auf die gewünschte Länge für eine optimale Massageerfahrung aus -bzw. einzufahren. Auf Loslassen der Taste wird die Fußstütze anhalten.

►Am Boden der Fußstütze ist ein Sensor installiert, der die Länge der Fußstütze automatisch anpasst.

WARNUNG
►Spielen Sie nicht auf dem Massagesessel oder nutzen ihn unsachgemäß.
►Achten Sie darauf, dass keine Hindernisse in der nahen Umgebung des Sessels bestehen, wenn Sie die Rückenlehne und Fußstütze hoch -bzw. runterstellen.
►Legen Sie nicht den Fuß, Finger, oder andere Objekte zwischen d Sitzfläche und Rückenlehne/Fußstütze, wenn diese sich in der Auf -oder Ab-Bewegung befinden.
►Achten Sie darauf, dass der Sessel in die ursprüngliche Ausgangsposition zurückgekehrt ist bevor Sie aus dem Sessel aufstehen.

Nach dem Gebrauch

- Trennen Sie den Massagesessel nach jedem Gebrauch von der Stromquelle.
- Legen Sie die Mittelkonsole in der Ablage ab.
- Schalten Sie das Modell aus und trennen es von der Stromquelle, wenn es nicht in Gebrauch ist, damit Kinder nicht den Massagesessel aus Versehen anschalten können.
- Falls Sie den Sessel für einen längerenZeitraum nicht in Gebrauch nehmen, empfehlen wir den Sessel abzudecken,das Netzkabel zusammenzurollen und ihn in einer staubfreien und trockenen Umgebung abzustellen

VORBEREITUNGEN VOR DEM GEBRAUCH:

Installationsmethoden

Schritt 1: Entnehmen Sie alle Massagesesselkomponenten aus dem Karton
►Entpacken des Kartons: Entnehmen Sie die Polsterung und Zubehör aus dem
►Bevor Sie mit dem Aufbau beginnen, prüfen Sie, ob alle Einzelteile vorhanden sind (überprüfen Sie sorgfältig anhand der Lieferliste).

Schritt 2: Installierung der Armlehnen

- Verbinden Sie den nummerierten Luftschlauch mit dem entsprechend nummerierten Stutzen auf der Armlehne und stecken den Luftventilverbinder ein (es bestehen 2 Luftventilstecker auf der Armlehnenseite).



- Heben Sie die Armlehne und haken den Aufhänger 2 in die Tragekerbe. Drücken Sie die Armlehneneinheit langsam in die Sesselverbindung bis Aufhänger 2 vollständig an Aufhänger 4 ausgerichtet ist. Setzen Sie Aufhänger 1 in Aufhänger 3 ein und verwenden eine Schraube zur Befestigung der Armlehne (selbe Installationsweise der anderen Seite).

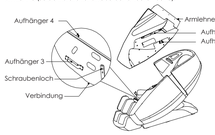

Schritt 3: Installation der Halterung für Sensorbildschirm
►Setzen Sie das untere Ende der Touchscreen-Fernbedienung in die Halterung und drehen den Stutzen im Uhrzeigersinn, um diese zu befestigen.

Schritt 4: Installation der Fußstütze
►Heben Sie die Fußstützeeinheit, führen den Luftschlauch in den Luftstutzen und setzen den Luftventilstecker in die Luftventilöffnung, die auf der Vorderseite des Sitzsockels sitzt.



Aufstellen des Massagesessels
Schaffen Sie Raum für den Massagesessel:
►Achten Sie darauf, dass ausreichend Platz zum Aufstellen des Modells vorhanden ist. Der Sessel benötigt zusätzlich 10 cm für das Herunterklappen der Rückenlehne und 60 cm für das Ausfahren der Fußstütze und das Vorgleiten.
►Stellen Sie das Modell in einem Abstand von mindestens 1 m von TV, Radio, oder anderen Audio -und Video-Geräten entfernt auf, um Signalstörungen zu vermeiden.

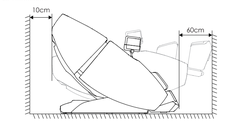

Bodenschutz
►Wir empfehlen Ihnen einen Teppich oder weiche Matte unter das Modell zu legen, um Schäden am Boden vorzubeugen.

►Setzen Sie den Beinstützenstift in die Beinstützenöse und befestigen die Beinstütze an dem Rotationsstab der Beinstütze. Danach bringen Sie die DK-Spange am Ende des Rotationsstabs der Beinstütze an, damit die Beinstütze fixiert ist. Am Ende lässt sich die Fußablage mit dem Rahmen des Massagesessels verbinden.

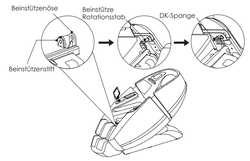

Schritt 5: Anderes Zubehör
►Verbinden Sie das Netzkabel mit der Netzsteckdose des Modells an der Elektrobox.
►Schalten Sie das Modell an der Rückseite der Elektrobox ein und bringen die Rückenlehne in eine vollständig aufrechte Position.

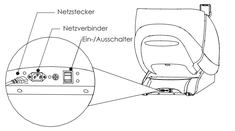

WARNUNG
Verwenden Sie den Massagesessel nicht in sehr feuchten Umgebungen, wie nahe bei Schwimmbecken oder Badezimmer, um Stromschlagunfälle zu verhindern.
Bitte halten Sie den Massagesessel entfernt von beheizten Oberflächen, um Feuergefahren oder Beschädigungen an dem Modell zu vermeiden.

GEFAHR
Dieses Modell muss geerdet sein, d.h. der Netzstecker muss mit einer geeigneten 3-adrigen Netzsteckdose verbunden werden, die gemäß den örtlichen Vorschriften und Gesetzen installiert und geerdet ist, um das Risiko eines Stromschlages zu minimieren.

Verschiebungsmethoden
►Schieben Sie das Modell auf den Rollen zu dem gewünschten Aufstellungsort.
►Stellen Sie die Rückenlehne in eine aufrechte Position.
►Schalten Sie das Gerät aus und trennen es von der Stromquelle.
►Verschieben Sie das Modell zu zweit, während eine Person die Rückenlehne herunterdrückt und die zweite Person vorne den Haltegriff unten an der Armlehne greift. Schieben Sie den Sessel dann auf den Rollen zu dem gewünschten Aufstellungsort (siehe die Skizze als Referenz).



ACHTUNG
►Verschieben Sie den Sessel nicht, wenn jemand auf ihm sitzt.
►Fassen Sie nicht zum Verschieben an der Fußstütze oder Armlehne, sondern fassen den Rahmen und die Rückenlehne (am besten 4 Personen tragen das Modell).

Verbindung mit einer Stromquelle
►Verbinden Sie das Gerät mit einer 3-adrigen angemessen geerdeten Netzsteckdose.
►Schalten Sie das Modell auf der rechten Seite des Sessels ein.

VORSICHT
►Prüfen Sie zuerst das Netzkabel, ob es beschädigt ist, bevor Sie das Massagesessel einschalten.
►Achten Sie darauf, dass das Modell ausgeschaltet ist bevor Sie es mit einer Stromquelle verbinden.

Inbetriebnahme

►Verwenden Sie die Schnellbedienungstaste, um die Rückenlehne in die niedrigste Position herunterzustellen und fahren die Fußstütze bis in die höchste Position. Achten Sie darauf, dass ausreichend Freiraum besteht bevor Sie das Gerät in Betrieb nehmen.
►Bringen Sie nach der Inbetriebnahme die Rück