

Laifen Glowly Vanity Mirror

User Manual

laifen

IMPORTANT SAFETY INSTRUCTIONS

Read the following information carefully before using the product and its accessories and keep it for future reference.


PRECAUTIONS

1. Do not use this product on surfaces inclined more than 6° to prevent tipping.
2. This luminaire is for indoor use only. Do not use outdoors, in damp or wet locations.
3. If the external flexible cable or cord of this luminaire is damaged, it shall be replaced by a special cord or cord exclusively available from the manufacturer or his service agent.
4. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
5. Do not disassemble or modify this product.
6. Do not place the product in humid environments for prolonged periods, as this may affect battery performance and product operation.
7. This product contains a built-in battery. Keep it away from fire to prevent fire or explosion.
8. If any abnormality occurs during use, stop using the product immediately.
9. This product is not intended for use by children. Keep out of reach of children. Close supervision is necessary when used near children.
10. The mirror surface is made of glass and is fragile. Handle with care and place on a stable surface after use. If the mirror cracks or breaks, stop using it immediately and dispose of fragments safely.
11. This product is not waterproof. Do not rinse with water or immerse in liquid.
12. Do not expose the product to direct sunlight or high temperatures for extended periods, as this may affect performance or appearance.
13. This product contains a light source of energy efficiency class E.
14. Do not place flammable materials (cloth, paper, curtains, etc.) close to the luminaire. Keep at least 30 cm (12 inches) away from combustible materials.
15. Do not place near heat sources, radiators, or direct sunlight.

MAINTENANCE INSTRUCTIONS

1. Cleaning: Wipe with a dry, soft cloth. Do not use chemical cleaners to avoid damaging the surface coating.
2. Storage: Turn off the power when not in use and store in a dry, well-ventilated place to extend product life.

Product Overview

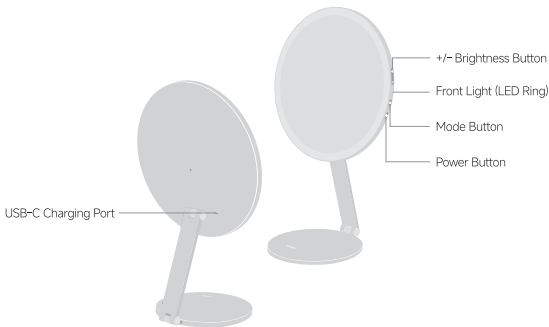


* The illustrations of the product, accessories, and user interface in this manual are for reference only. Due to product updates and upgrades, the actual product may differ slightly from the illustrations. Please refer to the actual product.

Specifications

Product Name: Laifen Glowly Vanity Mirror • Model: LFMM M8 • Weight: 1000 g • Dimensions: 243 × 243 × 30.5 mm (folded) • Color Temperature: 3000–5000 K • CRI: Ra 97 • Rated Power: Max 8.5 W • Rated Charging Input: 5 V = Max. 1.7 A • Battery Capacity: 5500 mAh • Runtime: 4 h (max brightness); 5.5 h (default brightness) • Charging Time: approx. 3.6 hours • Ambient temperature ta: 25°C

Power On & Mode

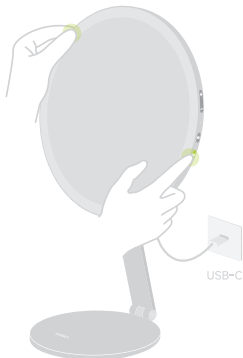

Place the mirror on a stable tabletop and connect the power supply.

* For first use, it is recommended to fully charge the battery.

Power Button

- Press the power button on the mirror frame briefly to turn on the light.

Mode Button

- Press once: Cycle through light modes
Cycle order:
White Light — Neutral Light — Warm Light
* Default: Morning Mode (Natural Light)

- Hold 3s: Turn seat-sensing on/off

* Blue light flashes twice: ON
* Blue light flashes once: OFF
* Default: Seat sensing ON

+/- Brightness Button

- Press once +/-: 6 brightness levels
- Hold +/-: Stepless brightness adjustment

Mirror Angle and Height Adjustment


Supports angle and height adjustment: the upper hinge of the mirror arm provides a tilt range of 0–45°

The lower hinge supports an opening angle of 3–65°

Combined with a vertical height adjustment range of approx. 177–370 mm

Enables precise positioning of the mirror.

The minimum adjustable angle of the upper bracket is always 0° (vertical).

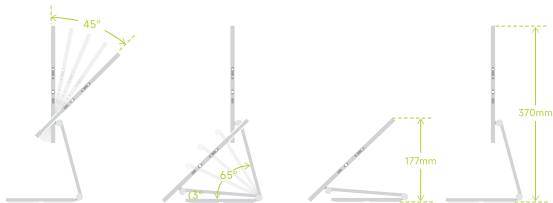

* Adjust the hinges gently and do not exceed the specified angles to avoid product damage.

Presence Detection

When Presence Detection Mode is enabled, the mirror uses a front radar sensor to detect user movement and determine whether the user is seated in front of the vanity mirror.

Auto On: The light automatically turns on when the user approaches within 30 ± 15 cm and remains for approximately 0.3 s.

Auto Off: The light automatically turns off 5 s (factory default) after the user moves more than 80 cm away.



* The presence detection function only detects real-time human movement. It does not collect or store personal information and does not support identity recognition or behavior tracking.

Adjustable Color Temperature Modes

Three preset modes match different scenarios. Cycle through the modes.

1. **White Light 5000 K:** Simulates the effect of midday sunlight and is suitable for setting makeup before going out, final checks before important meetings, or before a date.
2. **Neutral Light 4000 K:** Provides a soft brightness similar to natural morning light, suitable for quick daily makeup and skincare checks.
3. **Warm Light 3000 K:** Creates an atmosphere similar to evening sunset or warm indoor lighting. The soft light is suitable for nighttime gatherings, candlelight dinners, and similar occasions.

* Factory default: Neutral Light 4000 K

Constant Brightness

The light brightness does not dim as the battery level decreases. It maintains stable usable illumination at all times.

Charging Instructions

The battery may be low upon first use. Please charge the product until the green indicator remains steadily on. Observe the following precautions during charging:


1. Properly connect the USB-C charging cable to the device charging port. Do not force insertion to avoid surface damage.
2. Please use an LED driver with SELV/PELV output.
3. This product does not include a power adapter and must be purchased separately. Use a certified adapter that complies with applicable standards. Avoid charging in humid environments such as bathrooms to ensure electrical safety. If any abnormality occurs during charging, stop charging immediately. Do not leave the device charging unattended for extended periods.
4. Charging indicators and corresponding battery levels are as follows:

Battery Percentage:	100%–20%	19%–1%	0%
Indicator Status:	Steady Green Light	Steady Red Light	The red light flashes 3 times and the device powers off, accompanied by the prompt tone "beep beep beep".

5. To protect battery life, when the operating temperature is 0–15°C, it is not recommended to use the product while charging when the battery level is low.

Anti-Pinch Safety Warning

When adjusting the mirror arm hinge, do not place your fingers in the gap to avoid finger injury.

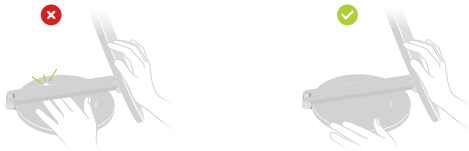

Troubleshooting

Fault Phenomenon	Common Fault	Possible Causes	Solution
Does not start	Buzzer beeps 3 times, orange ring flashes rapidly, then shuts down	Discharge Over-Temperature Fault	Not a fault. Usable after temperature recovers
	The buzzer beeps three times, the purple light ring flashes rapidly to	Discharge Low-Temperature Fault	
	Buzzer beeps 3 times, orange/purple light flashes slowly, then shuts down.	NTC Fault	Requires After-Sales Service
Starts normally	Buzzer beeps 3 times, orange light keeps flashing	Buzzer beeps 3 times, orange light keeps flashing	Not a fault. Usable after temperature recovers
	Buzzer beeps 3 times, orange light keeps flashing	Buzzer beeps 3 times, purple light keeps flashing	Not a fault. Usable after temperature recovers

* This troubleshooting table lists only the most common user self-check cases. If your issue is not listed above or remains unresolved, please contact after-sales service.

Disposal and Recycling Information

Correct Disposal of This Product (Waste Electrical & Electronic Equipment) (Applicable in countries with separate collection systems).



This marking indicates that the product should not be disposed of with other household waste at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

BATTERY DISPOSAL INFORMATION

The Laifen Glowvy Vanity Mirror contains a Li-ion rechargeable battery. In general, the life expectancy and battery life of these batteries vary with usage, so avoid leaving it discharged or unused for extended periods.

Caution: Do not open, damage, or expose the battery to conducting materials (metal), moisture, liquid, fire, or heat. Doing so may cause the battery to leak or explode, resulting in personal injury. The built-in rechargeable battery contains substances that could potentially harm the environment and may require disassembly for proper recycling in accordance with the laws of your country or region. For professional guidance on battery removal or if the battery cannot be removed, please consult Laifen directly or take the Glowvy Vanity Mirror to a government-designated recycling center.



Battery Removal Steps:

1. Turn off the power and disconnect charging.
2. Use tools to open the mirror panel.
3. Disconnect the battery cable using insulated tools.
4. Remove the tape behind the battery with tools, then remove the battery.
5. Dispose according to classification.

* After removing the battery, do not connect the mirror to power.

REGULATORY COMPLIANCE INFORMATION

FCC Regulatory Compliance:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Compliance:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

IC Regulatory Compliance

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and

Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference; and

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada

applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage;

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Cet équipement est conforme aux limites d'exposition au rayonnement du CI établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

Wireless Operating Frequency: 24.0GHz~24.25GHz

Output Power: Max 20dBm e.i.r.p.

EU Compliance Notices

EU Compliance Statement:

Shenzhen Shuye Technology Co., Ltd. hereby declares that the device (Laifen Glowly Vanity Mirror) is in compliance with the essential requirements and other relevant provisions of the Directive 2014/53/EU (RED), Directive 2012/19/EU (WEEE), Directive 2011/65/EU (RoHS), Regulation 1907/2006 (REACH), and Directive (EU) 2023/1542 on batteries.



GB Compliance Statement:

Shenzhen Shuye Technology Co., Ltd. hereby declares that the device (Laifen Glowly Vanity Mirror) is in compliance with the essential requirements and other relevant provisions of the Electrical Equipment Safety Regulations.

Australian & New Zealand RCM Compliance Certification



NOTICE FOR KOREA EMI STATEMENT



Return Policy

Return Service

The return period may vary depending on the regulations of the region and store where the order was placed. Please refer to the order purchase page or relevant store information for the specific return period. If you have any questions, please contact Customer Support at csteam@laifentech.com

To be eligible for a refund, you must:

- Return the appliance with all included accessories and gifts.
- Return it in its original packaging.
- Provide valid proof of purchase and/or delivery.
- Ensure the appliance and accessories are in resalable condition.

Return shipping costs:

- Returns due to product quality issues will have shipping costs covered by Laifen.
- Returns for any other reasons are the responsibility of the customer.
- All costs associated with the return, including shipping fees, will be borne by the customer.

Warranty & Support

Laifen 1-year limited guarantee*

Laifen offers a 1-year limited warranty on the Glowly Vanity Mirror. Within one year from the date of purchase or delivery (whichever is later), if your appliance fails to function properly due to material or workmanship defects, we will provide repair or replacement services. Please note that depending on the availability of stock, the replacement may come in a different color or be an equivalent model. A valid proof of purchase or delivery is required. If you cannot provide proof of delivery, the warranty starts from the date of purchase. The warranty is valid only in the country or region of purchase.

Laifen's Limited Warranty does not override your statutory rights under local consumer laws. Coverage may differ based on regional legal requirements.

To obtain service under this Limited Warranty, please contact us via our official email or customer service hotline (as listed below) with the following information: model name/number, serial number, and proof of purchase and/or delivery.

What is not covered under warranty:

- Purchased from unauthorized resellers.
- Warranty period has expired.
- Appliances without a valid proof of purchase and/or delivery.
- Appliances that have been modified, altered, or repaired through unofficial channels.
- Appliances that were used for any purpose other than beauty illumination.
- For professional or commercial use
- Damage caused by operations that are not in accordance with the Laifen User Manual.
- Damage caused by any misuse or accident.
- Damage caused by excessive usage that is not normal wear and tear.
- Damage to or loss of the charging port silicone cover (if applicable) or the cord strap of the appliance.
- Product aging and wear caused by normal use, which do not affect the proper functioning of the product (e.g., natural consumption of components such as batteries.)

Get Professional Assistance from Laifen

If you have any further inquiries regarding our warranty policy or product usage, please feel free to contact us via email at csteam@laifentech.com. We greatly appreciate your feedback and look forward to assisting you.

For more information on product usage, please visit
Laifen official website: www.laifentech.com

Manufacturer: Shenzhen Shuye Technology Co., Ltd.
Address: Room 1301, Building T7, Qianwan 1st Road No. 399, Qianhai Kerry
Business Center, Nanshan, Shenzhen, Guangdong, China.