


NAIPO

User Manual

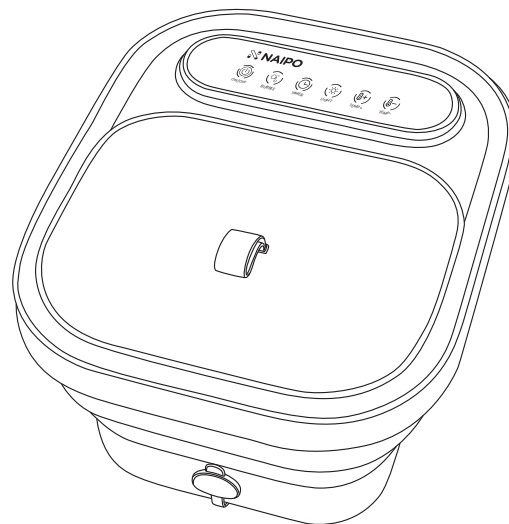

Foot Spa Bath Massager

Model: FS-FM015

Manufacturer/Hersteller: Aukey International limited

E-mail: wholesale@naipocare.com

Address/Adresse: 601 6/F, Tung Hip Commercial Building 248 Des
Voeux Road Central, Sheung Wan, Hong Kong



Made in China

Introduction

Thank you for purchasing Foot Spa Bath Massager from us. Please read this user manual carefully and keep it in a safe place for future reference. If you need any assistance, please contact our support team with your product model number and order number.

Included:


1 x Foot Spa Massager

1 x User Manual


Product Specifications

Model	FS-FM015
Name	Foot Spa Bath Massager
Rated Voltage	220-240V (EU)
Rated Frequency	50Hz (EU)
Power Rating	505W
Net Weight	5.62 lb
Product expanded size	15.8*13.4*8.8 inch
Product folding size	15.8*13.4*4.5 inch
Temperature Range	95°F - 118°F

Product Diagram

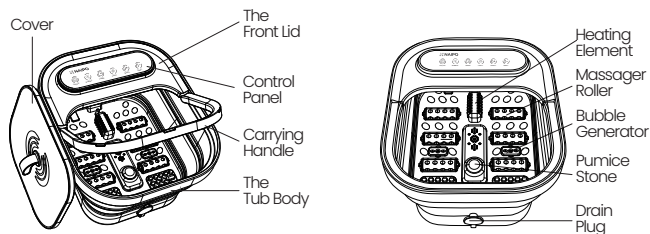

Control Panel

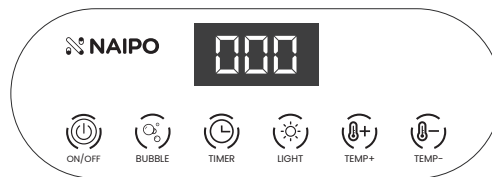

Product Operation Guide

Expand the folded part, Lay the product flat and fill it with moderate amount of water (the temperature of water is recommended to be 95°F to save your time for waiting). Connect the product to power supply and "OFF" will appear on the screen.

 **Power Button:** Press the power button and the current water temperature will be displayed on the screen.

 **Bubble Button:** Bubble function activates automatically at startup; Press the BUBBLE button once to turn it off.

 **Timer Button:** The default setting is 60 minutes. You can click to select 60 minutes, 50 minutes, 40 minutes, 30 minutes, 20 minutes, 10 minutes (6 levels)

 **Light Button:** The lighting function activates automatically at startup; Press the LIGHT button once to deactivate it.

 **Temperature Up Button:** Each click increases the temperature by 1°F (up to maximum 118°F).

 **Temperature Down Button:** Each click decreases the temperature by 1°F (minimum: 95°F).

User Tips:

1. The range of water temperature is recommended to be 95-113°F (overly high temperature might hurt the skin).
2. Never turn on the heating function if there is no water in the product, otherwise the motor would be burnt, leaving the product unable to work any more.
3. The heating element is located in the center of the product, so it's strongly recommended to turn on the bubbling function while the heating function is on for accelerated circulation of water heating.
4. Always maintain the water level between the MIN and MAX indicator lines to ensure safe usage and optimal performance of the product.



Since the product is foldable, Do not place your feet directly on the footbath when using it. The force will cause the product to shrink.



The min/max water level indicators are located on the inner left side when facing the foot Massager.

Q & A

Problem	Cause	Remedy
The heating function doesn't work.	The product is not connected to the power supply.	Please check and connect the product to the power supply.
The product doesn't work.	The product is not initiated properly though connected to the power supply.	Please use the product strictly following the user manual.
The product stops working during the use.	The product works beyond default time.	Please restart the product.

Important Safeguard

01. Please do not use the product if it is damaged.
02. Read the user manual carefully before the product is put into use.
03. Please do not use the product without water inside the tub and keep the water volume between minimum line and maximum line. Please disconnect the product from mains supply after use.
04. Please do not stand on the product or put heavy things inside it.
05. Please do not pull the power cable and pull or lift the product by the cable, otherwise it might get damaged.
06. Please make sure that the product is always positioned horizontally.
07. Please stop using the product when uncomfortable feelings occur, such as feeling dizzy and headache.
08. Please make sure that the cable line and plug are dry and keep them away from fire when the product is in use.
09. Please do not fill the tub with liquid of acidity, basicity or corrosivity and liquid containing particles or floccules.
10. Please do not fill the tub with water above 113°F (45°C), otherwise your feet might get burnt or the product might be out of shape because of high temperature.
11. This product is not recommended for people with inflammation, trauma, ringworm and burns on feet.
12. People with heart disease, people with serious embolism and cerebral hemorrhage, pregnant women and people with terminal diabetes are not recommended to use the product without consulting a doctor.
13. Children, people who are disabled (both physically and mentally), sluggish elders and those who are insensitive to heat or cold are recommended to use the product only with assistance from others.
14. Please do not use this product before or after meals within 30 minutes.

WARRANTY & CUSTOMER SUPPORT

If you need assistance with product issues, after-sales service, or other related problems, please contact us by providing your order number.

*Note: Products purchased directly from us are eligible for our after-sales service. For purchases made through other sellers, please contact them directly for warranty support.